

Multimedia Series



Model No.#

9976KMOTG (White) w/ PS-2

2092KMOTG (Black) w/ PS-2

7216KMOTG (White) w/ USB

0692KMOTG (Black) w/ USB

Number of Key

104 standard Keys+18 Hot Keys

Dimension (L)x(W)x(H)mm

451 x 59 x 36 mm

Plugs

PS-2/USB

System Requirements

- DOS 5.0 or later
- Window
3.1/95/98/2000/ME/NT/XP or later
- IBM PC or Compatible System

Safety Regulation

CE / FCC

Color

White & Black

Feature

- PS-2 & USB fully compatible (adapter needed)
- 18 Internet/ media hot keys
- 3 ACPI power management keys
- High quality membrane tactile key switch available
- More than 5 million time switch reliability

Hot Key Specification:

3 ACPI Power Management Keys & 2 Office Application Keys

	Sleep	On computers with a power management program, the "Sleep" Hot Key enables you to : Start your screen saver / Log off Windows / Shut down Windows.
	Wake Up	On computers with a power management program, the "Wake up" Hot Key enables you to restore, or wake up your computer.
	Power	On computers with a power management program, the "Power" Hot Key enables you to : Log off Windows / Shut down Windows.
	Calculator	Press this button to activate "Windows Calculator".
	My computer	Press this button to open " My computer ".



Internet Hot Keys

	Back	Press this button to go to previous page.
	Forward	Press this button to go to next page.
	Stop	Press this button to stop current transmission.
	Refresh	Press this button to update the current page.
	Search	Press this button to bring up " Search Windows " for Web address ; Press this button again to close " Search Windows ".
	Favorites	Press this button to bring up "My Favorite Window". Press this button again to close "My Favorite Window".
	Web/Home	Press this button to go to the default Home Page.
	Mail	Press this button to activate the e-mail system.

Multimedia Hot Keys

	Media	Press this button to activate " Windows Media Player ".
	Mute	Press this button to mute sound. Press it again to resume sound.
	Previous	Press this button to set media back by one track. During playback of a video file, depress this button to cause the player to rapidly reverse it's playback direction. Press this button once to skip back to the beginning of current track. Press this button twice to skip back to the beginning of previous track.
	Stop	Press this button to stop playing the media.
	Play/Pause	Press this button to begin playing a CD or a video file (or to restart after pause). During playback press this key to pause the playback, press it again to resume playback on current position.
	Next	Press this button to instruct the CD player to queue up beginning of the next track. During playback in a video file.
	-Volume	Depress this button to cause the player to fast forward.
	+Volume	Press this button to decrease volume. Press this button to increase volume.